


1 Description

1.5.1 Introduction to load diagrams

Continued

The result from RobotLoad is only valid within the maximum loads and tilt angles. There is no warning if the maximum permitted armload is exceeded. For over load cases and special applications, contact ABB for further analysis.

Load diagram IRB 4400/60

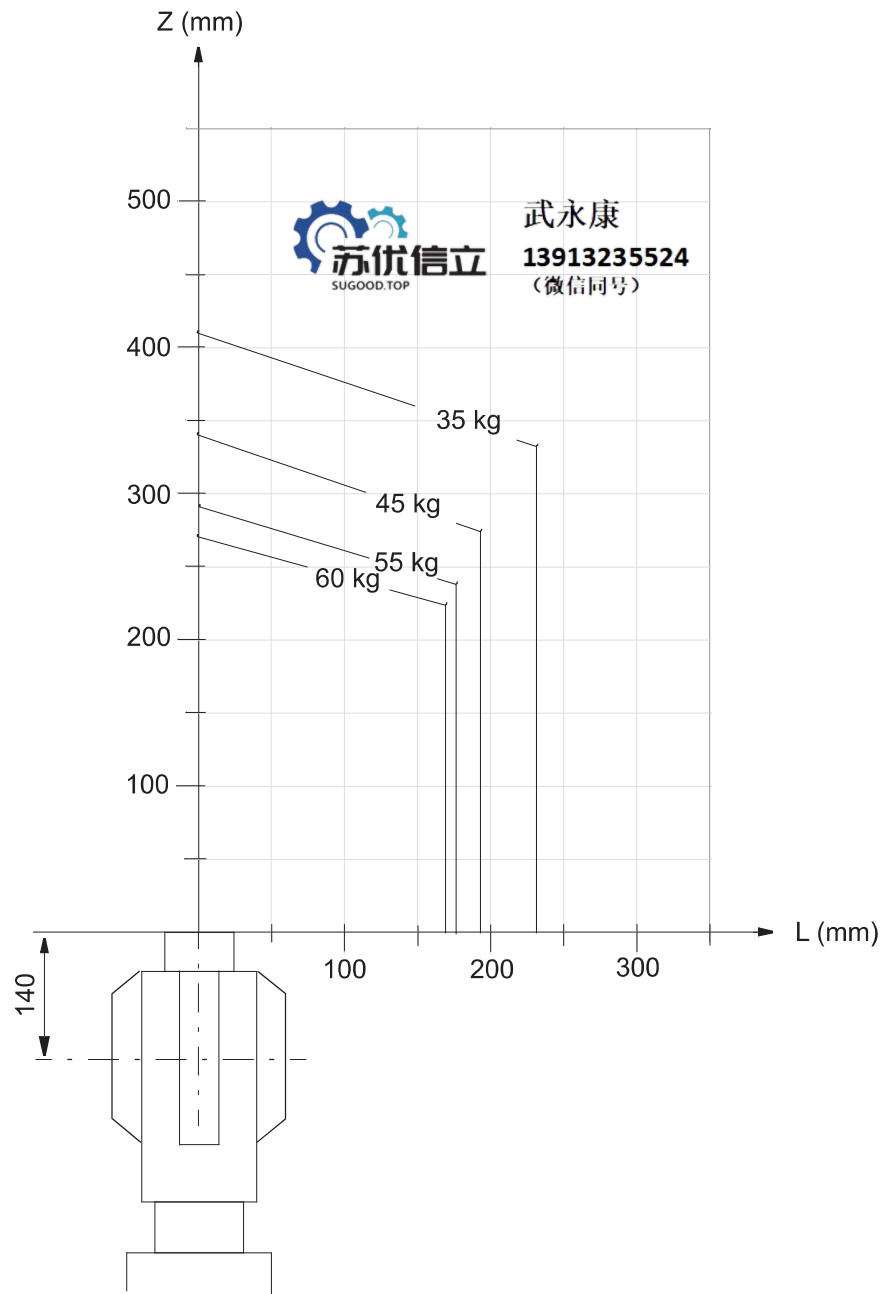

Continues on next page

Load diagram IRB 4400/L10

